

- № 289 Wagaraw Road, Hawthorne NJ 07506

 injsteel@njsteelbaron.com

 SteelBaron.com

 973-949-4140

About Nitro-V®	2
About Nitro-V®	3
Alloy Chemistry % 3	
Blade Steel Comparograph 3	
About Nitro-V® Catra Test 4	4
Flexural Strength 4	
Impact Toughness 4	
Corrosion Resistance 4	
Hardness 4	
Tensile Test 4	
Heat Treating	5
Important - Before Treating Hardening (with Cryo) 5	
Cyrogenic Treatment 5	
Heat Treating Tempering (with Cryo) 6	6
Heat Treating Important - Before Treating Hardening (without Cryo) 7	
Heat Treating	8
Tempering (without Cryo) 8	
<u>Heat Treating Disclaimer</u>	9

Buderus



- 🕰 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- SteelBaron.com
 973-949-4140

About Nitro-V

NJSB has been supplying AEB-L for a number of years after recognizing its place and history in the knife industry. We are also aware of manufacturers and large scale production custom makers that have also worked with the 14C28N from European suppliers. While looking at our efforts for growth and expanding inventory options, our relationship with our foundry enabled us to consider the potential benefits to a hybrid between these two families of steel, giving way to Nitro-V. By combining fine carbide structure and higher stain resistance, we would be able to offer an affordable high performance steel as an option to more expensive boutique stainless super steels. Likewise, as a proprietary steel to NJSB, we would be able to offer a stable formula for consistent results that customers request—ease to work with, easy to finish, and easy to maintain.

Nitro-V is a high carbon stainless with the addition of nitrogen and vanadium. Vanadium has long been regarded a principle alloying element for hard working steels, from simple tool steels to aerospace parts. By increasing grain refinement and assisting in carbide formation, edges are easier to retain and maintain, whether as a razor, luxury kitchen knife, or tactical folder. Nitrogen has only been an industry staple the past decade, nitrides increase stain resistance by bonding with chromium oxide layers naturally formed during grinding and polishing operations. The chromium and nitrogen oxide combination then allows exposure to more severe environments, specifically and especially wet working conditions such as professional kitchens or off-shore. Together, nitrogen and vanadium bring Nitro-V into a whole new category apart from either predecessor, enabling it to be used in applications and methods previously ill-suited to 14C28N and AEB-L.

Users will find Nitro-V easy to work both annealed and hardened, while offering the most economical use of consumables like belts or easy heat treating comparative to other super stainless steels. Due to its characteristics, Nitro-V is ideal in most stock removal situations such as waterjet or metal bandsaw while annealed, and relatively forgiving when ground fully hardened from blank. Due to the material's properties, swarf is typically large, and removes easily despite its abrasion resistance characteristics. As it is so relatively easy to grind, it also polishes with minimal extra needs or materials, a maker can be assured that hand sanding nitro-V will be no more or less difficult than their standard knife in a carbon or simple stainless steel. We concurrently suggest one of two methods for heat treating with and without cryo, however, its chemistry needs only a minimal subzero treatment to within -98°F to -94°F degrees for a minimum time only as long as needed to soak through and chill the steel. In this fashion, NJSB is proud to say that Nitro-V is not just an economical choice as a material, but affords the maker a steel that is equally low in overhead.







- 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- SteelBaron.com
 973-949-4140

About Nitro-V®

Alloy Chemistry %

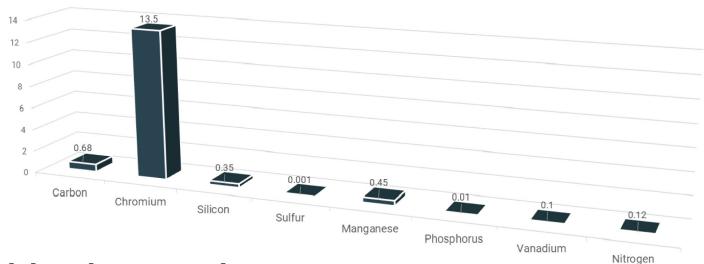

Blade Steel Comparograph

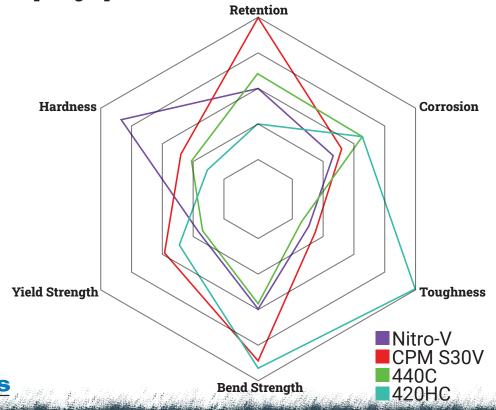





- 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- SteelBaron.com
 973-949-4140

About Nitro-V®


Catra Test

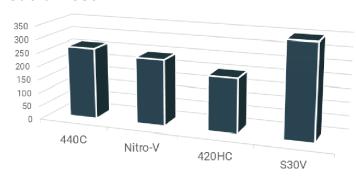


Corrosion Resistance

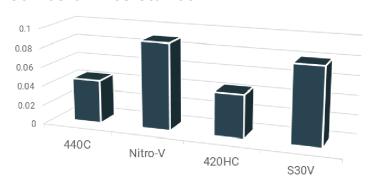


Flexural Strength

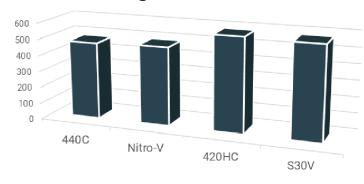


Hardness

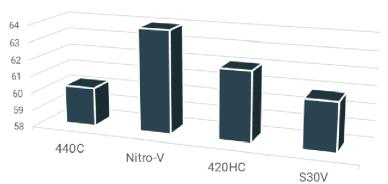

Impact Toughness

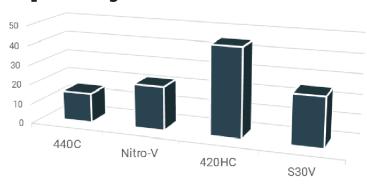

Tensile Test

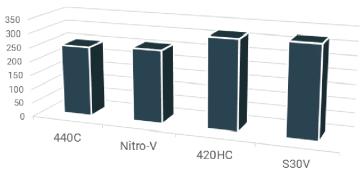



289 Wagaraw Road, Hawthorne NJ 07506

✓ njsteel@njsteelbaron.com


\$ SteelBaron.com **973-949-4140**

Nitro-V | Heat Treating

Heat Treating

Important - Before Treating | Hardening (with Cryo)

- Knives should be cleaned by washing with soapy water and then either placed into foil pouch or coated with high temperature anti-scale/decarburization compound prior to heat treat if not using Oxygen free heat treat equipment.
- Skipping stages such as pre-heating and equalizing or cryo will result in lower hardness, higher amounts of Retained Austenite (RA), impaired stain resistance or other issues. Ramp AFAP (as fast as possible) between preheating and austenizing temps.
- Clamping flat after quench during cryo or tempering recommended to avoid thermal shock induced warp.
- Figures represent quenching under positive pressure with aluminum plates and compressed air to at or below 125°F / 50°C--alternative quenching methods may present lower hardness, high RA, or other issues.

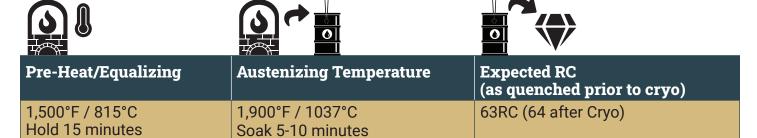

Cyrogenic Treatment

- A cryogenic treatment is recommended to convert retained austenite, and can either be done before or after the first temper cycle.
- While liquid nitrogen is preferred, a sub zero bath with dry ice and kerosene will suffice for -100°F / -74°C.
- Submerge in sub-zero treatment 1 hour depending on thickness and number of blades.
- A cryogenic treatment can be done immediately done after quench, but it is recommended blades be clamped flat to avoid thermal shock induced warp--cryo treatment should always be followed by a tempering cycle.





- 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- # SteelBaron.com 973-949-4140

Heat Treating

Tempering (with Cryo)

- Once blade is quenched and near ambient temperature, blades should be tempered accordingly, the times suggested are to ensure even, consistent temperature.
- Figures supplied are as representative of industrial standards.
- If using a small toaster oven or household kitchen oven for tempering, using a blade holding rack made from kiln furniture, a roasting tray lined with fine sand, or similar large object will help retain thermal mass to reduce wide swinging temperatures as the device fluctuates trying to maintain temperature.
- Note: Final hardness values vary based on initial as-quenched hardness and percentage of conversion to Martensite. Only reliable testing methods, e.g. calibrated Rockwell hardness tester, can provide actual hardness values--hardness calibrated files and chisels are relative testing methods and inaccurate for true hardness value reading.
- · Temper twice for 2hrs.





Temperature:	Hardness (2 hour x2 guideline):
300°F / 149°C	64
350°F / 177°C	63
400°F / 204°C	62
450°F / 232°C	61
500°F / 260°C	60
600°F / 316°C	58

• Manufacturers warn against tempering at 800°F / 425°C and above as sensitization will result in reduction of toughness and corrosion resistance.






- 289 Wagaraw Road, Hawthorne NJ 07506
- ✓ njsteel@njsteelbaron.com
- SteelBaron.com
- **973-949-4140**

Heat Treating

Important - Before Treating | Hardening (without Cryo)

- Knives should be cleaned by washing with soapy water and then either placed into foil pouch or coated with high temperature anti-scale/decarburization compound prior to heat treat if not using Oxygen free heat treat equipment.
- Skipping stages such as pre-heating and equalizing or cryo will result in lower hardness, higher amounts of Retained Austenite (RA), impaired stain resistance or other issues. Ramp AFAP (as fast as possible) between preheating and austenizing temps.
- Clamping flat after quench during cryo or tempering recommended to avoid thermal shock induced warp.
- Figures represent quenching under positive pressure with aluminum plates and compressed air to at or below 125°F / 50°C--alternative quenching methods may present lower hardness, high RA, or other issues.

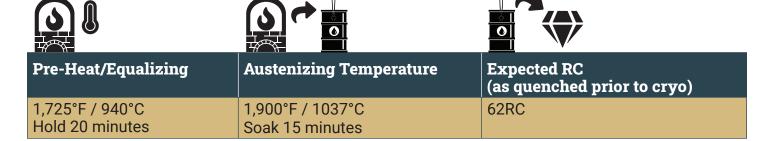





- 🕰 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- # SteelBaron.com 973-949-4140

Heat Treating

Tempering (without Cryo)

- Once blade is quenched and near ambient temperature, blades should be tempered accordingly, the times suggested are to ensure even, consistent temperature.
- Figures supplied are as representative of industrial standards.
- If using a small toaster oven or household kitchen oven for tempering, using a blade holding rack made from kiln furniture, a roasting tray lined with fine sand, or similar large object will help retain thermal mass to reduce wide swinging temperatures as the device fluctuates trying to maintain temperature.
- Note: Final hardness values vary based on initial as-quenched hardness and percentage of conversion to Martensite. Only reliable testing methods, e.g. calibrated Rockwell hardness tester, can provide actual hardness values--hardness calibrated files and chisels are relative testing methods and inaccurate for true hardness value reading.
- · Temper twice for 2hrs.





Temperature:	Hardness (2 hour x2 guideline):
300°F / 149°C	62
350°F / 177°C	60
400°F / 204°C	58
450°F / 232°C	56

• Manufacturers warn against tempering at 800°F / 425°C and above as sensitization will result in reduction of toughness and corrosion resistance.





- 🕰 289 Wagaraw Road, Hawthorne NJ 07506
- ≥ njsteel@njsteelbaron.com
- SteelBaron.com
- **9** 973-949-4140

Heat Treating Disclaimer

- Suggested heat treatment are based on the recommended specifications for use in ovens, high temp salts, and similarly, properly calibrated equipment; and in line with proper industrial standards for quenching. Deviation from industry standards for schedules, equipment, quenching mediums; and hardness testing equipment may result in varied results. The supplied information on this page is on a generalized scale with the above mentioned standards and methods, which is why soak times and similar aspects may vary in time length to include a margin for the available heat treating equipment and steel cross section.
- If you are unsure if you have the necessary means to heat treat on-site, we recommend professional heat treating services provided by Peters Heat Treat or Bos Heat treating; or industry specific services by knife material dealers such as TruGrit or Texas Knifemaker's Supply--check with suppliers to see if they offer HT services and ensure they follow industry standards.
- NJSB LLC is not liable or responsible if proper industry heat treating protocols are not applied; particularly and especially if sending to an independent heat treat provider if they do not follow the intended heat treat schedule or standards for that particular steel; or damage they cause while in their possession.

